

Wiser2 流動裝置應用程式

Wiser2

用戶手冊

User Guide

目錄

Schneider Wiser2 App

安裝及設定智能操控程式	P.3
iOS裝置	P.3
Android裝置	P.8
使用介面說明	P.13
更改Wiser2帳號及密碼	P.21
動態DNS的設置	P.24

安裝及設定智能操控程式

流動應用程式支援iOS及Android平台。用戶需下載、安裝及設定Wiser2應用程式。完成所有設定後，用戶可透過流動裝置登入及控制智能家居設備。

iOS裝置

下載及安裝智能操控程式

用戶可以於App Store搜尋“Wiser2”或掃描以下的二維碼，下載及安裝Wiser2應用程式。



iOS



二維碼(只適用於iOS裝置)

Wi-Fi 連接

成功下載流動應用程式後，用戶需要把手機或平板電腦連接到與Wiser2相同Wi-Fi網絡。



Wiser2 登入

用戶可根據以下流程設定及登入Wiser2系統。

步驟1

開啟Wiser2應用程式。

步驟2

根據下圖位置輸入Wiser2的IP地址(“IP Address”)。

預設的IP地址：**192.168.1.201***

(*請勿更改設定內的IP地址。)

The image shows a green-themed login interface for 'Wiser2 HOME CONTROL'. At the top right is a 'Help' button. The main area contains four input fields: 'WAN URL', '192.168.1.201' (highlighted with a red rectangle), 'DemoFlat', and a field with seven dots. Below these is a 'Connect' button.

步驟3

根據下圖位置輸入使用者名稱及密碼。

預設的使用者名稱：[請參閱HKT智能家居服務密碼通知信](#)

預設的密碼：[請參閱HKT智能家居服務密碼通知信](#)

(*只適用於未修改帳戶資料的用戶。)

The image shows a mobile application interface for 'Wiser2 HOME CONTROL'. At the top right is a 'Help' button. The app logo 'wiser2 HOME CONTROL' is at the top center. Below it are three input fields: 'WAN URL' with the value '192.168.1.201', a username field containing 'DemoFlat', and a password field with seven dots. A red rectangle highlights the username and password fields. At the bottom is a large 'Connect' button.

步驟4

按連接鍵“Connect”，即可登入Wiser2系統。

Wiser2 遙距操控

用戶只須簡單輸入連結就可遙距操控Wiser2裝置。

步驟1

進入應用程式的登入介面。

(如正在使用應用程式，用戶可以按登出鍵“Logout”回到登入介面。)

步驟2

用戶需把連結「動態DNS」輸入到“WAN URL”的位置上。
(用戶可參考動態DNS的設置找到相關的連絡網址。)

The image shows a login interface for the Wiser2 system. It has a green background. At the top right is a 'Help' button. Below the 'wiser2' logo is a 'WAN URL' input field, which is highlighted with a red rectangle. Below this is a text field containing '192.168.1.201'. Below that is a text field containing 'DemoFlat'. Below that is a password field with seven dots. At the bottom is a 'Connect' button.

步驟3

輸入使用者名稱及密碼。

預設的使用者名稱：[請參閱HKT智能家居服務密碼通知信](#)

預設的密碼：[請參閱HKT智能家居服務密碼通知信](#)

(*只適用於未修改帳戶資料的用戶。)


步驟4

按連接鍵“Connect”，隨即登入Wiser2系統。

Android裝置

下載及安裝智能操控程式

用戶可於Play Store 搜尋“Wiser2”或掃描以下的二維碼，下載及安裝Wiser2應用程式。

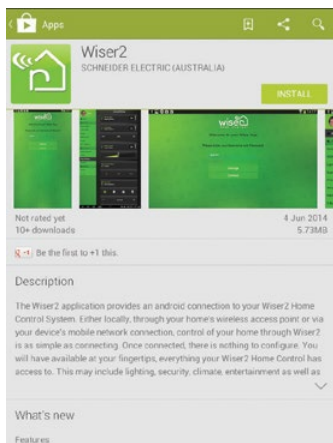

Play Store



二維碼(只適用於Android裝置)

Wi-Fi 連接

成功下載流動應用程式後，用戶需要把手機或平板電腦連接到與Wiser2相同Wi-Fi網絡。



Wiser2 登入


用戶可根據以下流程設定及登入Wiser2系統。

步驟1

開啟Wiser2應用程式。

步驟2

按設定鍵“Settings”。

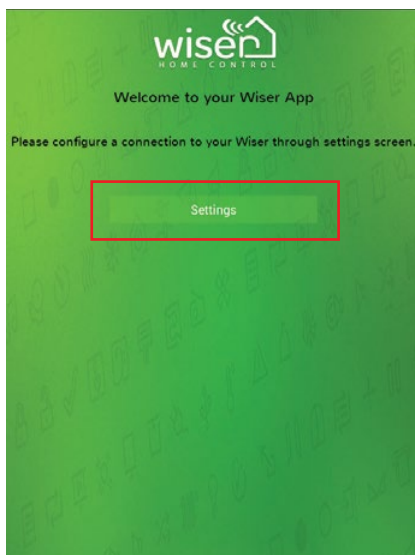


步驟3

根據下圖位置輸入Wiser2的IP地址(“IP Address”)。

預設的IP地址: 192.168.1.201*

(*請勿更改設定內的IP地址。)

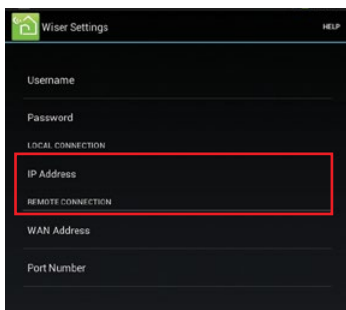The image shows a screenshot of the 'Wiser Settings' application interface. At the top, there is a green house icon and the text 'Wiser Settings', with a 'HELP' button on the right. Below the header, there are input fields for 'Username' and 'Password'. Under the 'LOCAL CONNECTION' section, the 'IP Address' field is highlighted with a red rectangular box. Below this, there is a 'REMOTE CONNECTION' section with fields for 'WAN Address' and 'Port Number'.


步驟4

根據下圖示位置輸入使用者名稱及密碼。

預設的使用者名稱：[請參閱HKT智能家居服務密碼通知信](#)

預設的密碼：[請參閱HKT智能家居服務密碼通知信](#)

(*只適用於未修改帳戶資料的用戶。)

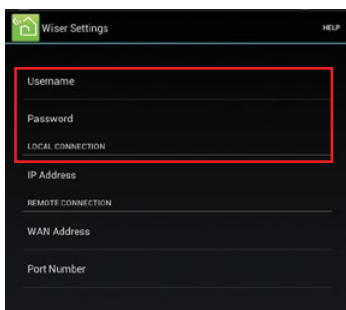The image shows a screenshot of the 'Wiser Settings' application interface, similar to the one in Step 3. In this screenshot, a red rectangular box highlights the 'Username' and 'Password' input fields. The rest of the interface, including the 'LOCAL CONNECTION' and 'REMOTE CONNECTION' sections, is visible but not highlighted.

步驟5

按流動裝置上的返回鍵 ，系統自動登入Wiser2系統。

Wiser2 遙距操控

用戶只須簡單輸入連結就可遙距操控Wiser2裝置。


步驟1

進入應用程式的登入介面。

(如正在使用應用程式，用戶可以按登出鍵“Logout”回到登入介面。)

步驟2


按設定鍵“Settings”。

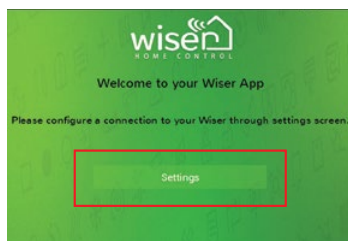

步驟3

用戶需把連結“動態DNS”輸入到“WAN Address”的位置上，然後按確定鍵返回設定頁。

(用戶可於動態DNS的設置找到相關的連絡網址。)

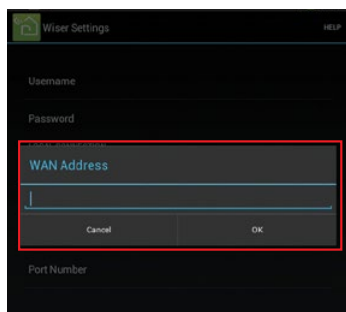

步驟4

輸入使用者名稱及密碼

預設的使用者名稱：[請參閱HKT智能家居服務密碼通知信](#)

預設的密碼：[請參閱HKT智能家居服務密碼通知信](#)

(*只適用於未修改帳戶資料的用戶。)

步驟5

按流動裝置上的返回鍵 ，系統會自動登入Wiser2系統

使用介面說明

主目錄

主目錄已預設不同設備的操控：



1. 設備操控“FUNCTIONS”

用戶可選擇不同的場景模式或按類別操控家中的設備，例如燈光、窗簾及空調等。

燈光操控“Lighting”


步驟1

選擇功能“Functions”，然後按燈光鍵“Lighting”控制燈光系統。

步驟2

用戶可按圖中右方的開關鍵“ON/OFF”，控制指定的燈光開關(此操控方式適用於只作開關的燈具)。

對於有配備調光功能的燈具，用戶除了可作開關外，更可輕觸下方的調光鍵“+/-”，調校所需的光暗度。

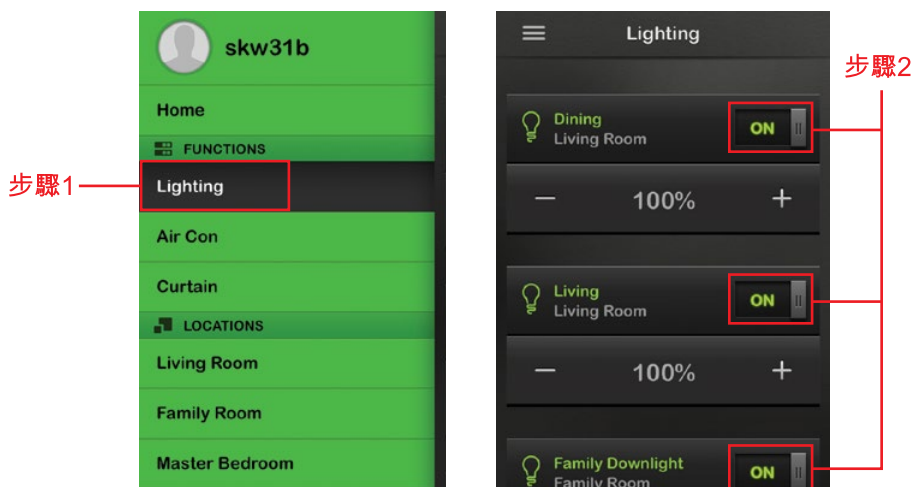


空調操控 “Air Con”

步驟1

選擇設備控制類“Functions”，然後按空調鍵“Air Con”。

步驟2

用戶可按圖中右方的開關鍵“ON/OFF”，控制指定的空調開關。

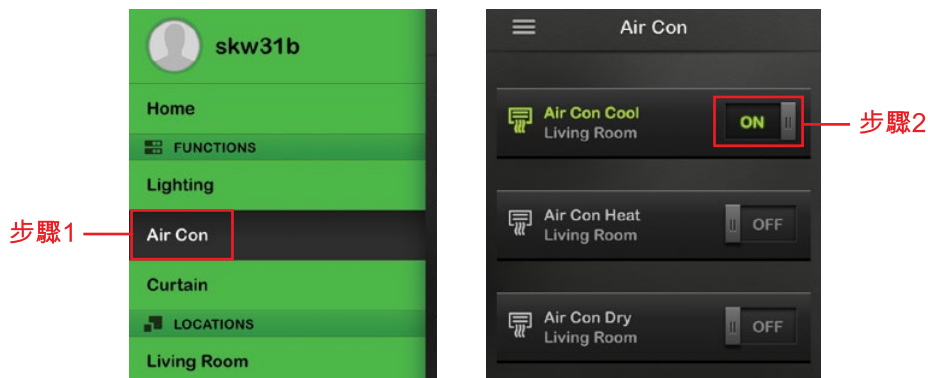


窗簾操控 “Curtain”

步驟1

選擇功能“Functions”，然後按窗簾鍵“Curtain”。

步驟2

用戶可輕觸圖中的開 **Open**、關 **Close** 及停止 **Stop** 鍵控制指定的窗簾。

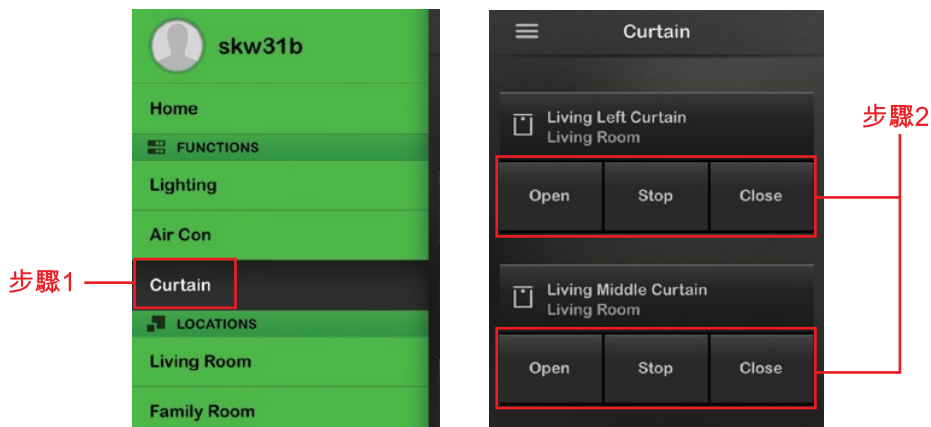

2. 區域操控 “LOCATIONS”

用戶可以根據家中的不同區域/位置控制對應的設備，例如客廳、飯廳、主人房、睡房和廚房等。

用戶可以選擇家中的指定位置，然後控制該位置的設備。

(位置的名稱可因應用戶的喜好而設定，例如將家中的不同位置的名稱設定為主人房 “Master Bedroom”、露台 “Balcony”、飯廳 “Dining Room” 等等。)


例子：用戶如需要關閉主人房的燈光，只需要選擇主人房 “Master Bedroom”，再選擇指定的燈光即可。

步驟1

按區域操控 “Locations”，然後再選擇所需控制的位置，例如圖中所示的 “Living Room”。

步驟2

系統會把預設在 “Living Room” 的設備從右方顯示出來(如下圖的設備為燈光)，用戶可隨意控制相關的設備。

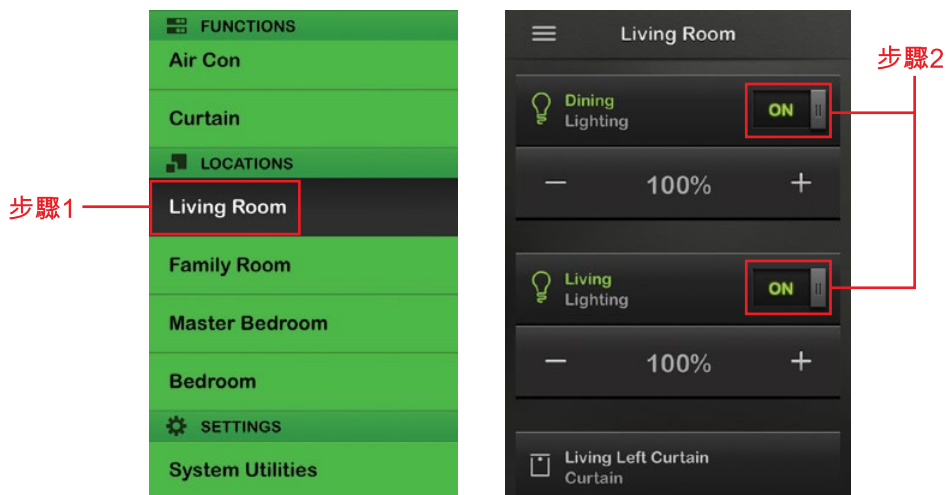

3. 設置 “SETTINGS”

用戶可修改場景模式的預設值，例如燈光的光暗度、窗簾開關和空調開關等。


場景編輯

Wiser2應用程式為用戶提供場景編輯的功能，用戶能更改場景模式中設備的數值，但不能夠增添/刪除場景模式中的任何設備。

例子：在場景模式 “Romantic”，當中包括了三組可調光燈光及一組窗簾控制。用戶可於場景編輯中更改該三組燈光的光暗度及窗簾開關，但不能在場景 “Romantic” 刪除/新增任何一組空調、燈光或窗簾。


步驟1

選擇系統設定 “SETTINGS”，然後再按場景編輯 “Edit Scenes”。

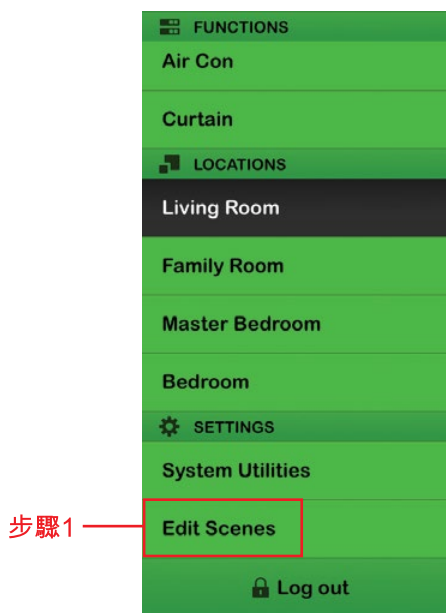

步驟2

選擇所需編輯的場景模式，按右方的編輯鍵“Edit”。

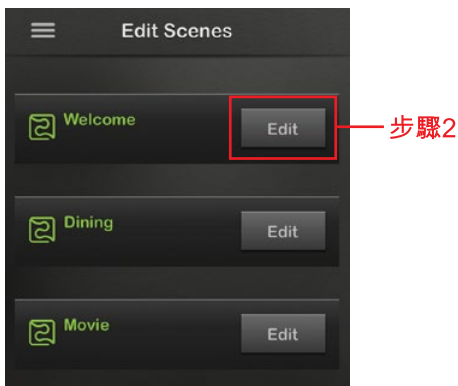

步驟3

於場景模式的編輯頁，用戶可以對每一個設備進行四項修改。



設備狀態 “Level”：

設定場景模式啟動時設備的最終狀態。

調光設備中，100%代表最光的狀態，0%代表關掉或最暗的狀態。

開關設備中，100%代表開啟，0%代表關閉。

速率 “Ramp rate” :

設定調光從控制開始到指定狀態所需的時間。

延遲 “Duration” :

設定當場景模式啟動後，開始控制設備的延遲時間。

例子

假設用戶在閱讀模式中把床頭燈設備狀態“Level”設為100%，速率“Ramp rate”設為1分鐘“min”，延遲“Duration”設為30秒“sec”

當閱讀模式啟動後30秒床頭燈會使用1分鐘的時間調到100%的亮度。

步驟4


按儲存鍵“Save”，確定對該情景作出修改。

4. 登出 “Log out”

用戶可以透過登出功能中斷流動裝置與Wiser2的連線。

步驟1

在介面的最下方按登出鍵 “Log out”。

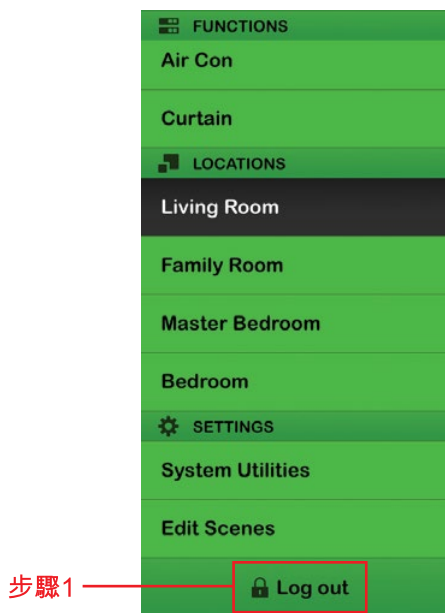

步驟2

按確定鍵 “OK”，確認登出Wiser2。

更改Wiser2帳號及密碼

用戶可以透過瀏覽器登入Wiser2系統，修改帳號及密碼。

用戶需要把瀏覽器的裝置連接到與Wiser2相同的內聯網中。

步驟1

開啟瀏覽器及輸入Wiser2的IP地址(“IP Address”)

預設的IP地址：[192.168.1.201](#)*

(*請勿更改設定內的IP地址。)

步驟2

根據圖示輸入使用者名稱及密碼。

預設的使用者名稱：[請參閱HKT智能家居服務密碼通知信](#)


預設的密碼：[請參閱HKT智能家居服務密碼通知信](#)

(*只適用於未修改帳戶資料的用戶。)




步驟3

選擇設定“Settings”中的「檔案」“Profiles”。

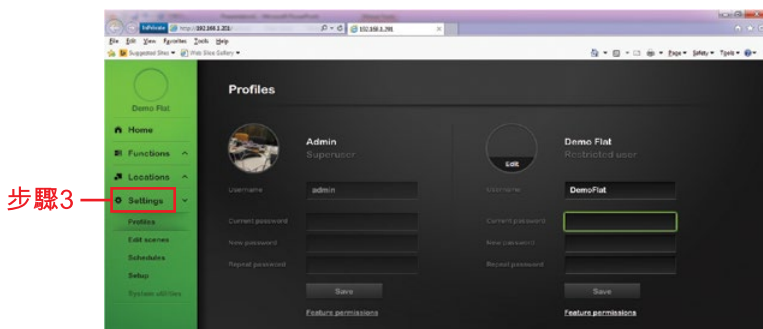

步驟4

用戶可以通過點擊「編輯」“Edit” 更改圖像。

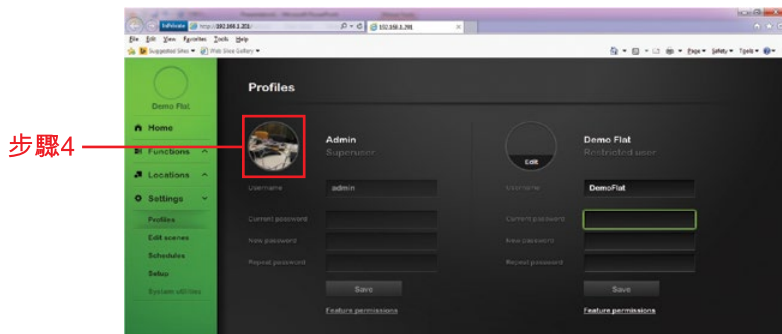


步驟5

用戶可以更改登入Wiser2的密碼，更改密碼亦適用於登入流動裝置上的應用程式。

舊密碼 “Current password”：用戶需要輸入正在使用的密碼

新密碼 “New password”：用戶需要輸入所需更改的密碼


重覆輸入密碼 “Repeat password”：用戶需要重新輸入新密碼以確保新密碼輸入正確

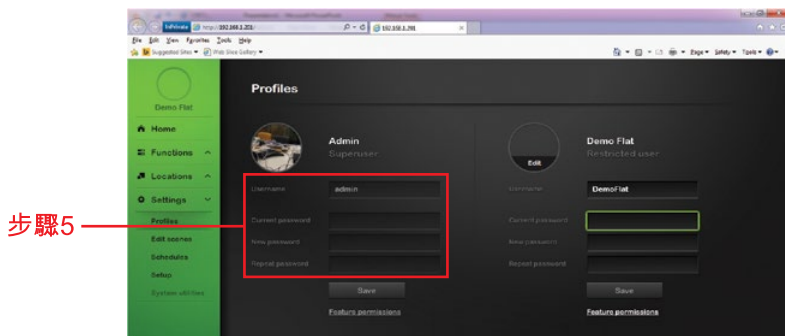

步驟6

選擇「儲存」“Save”，確定修改帳戶資料。

步驟6

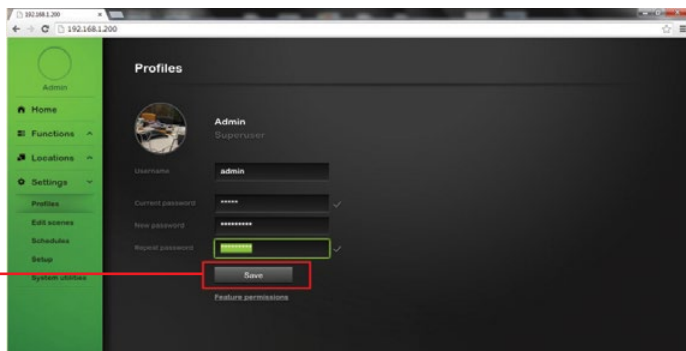

動態DNS的設置

用戶可根據以下步驟註冊個人域名。

(只適用於已登記網上行寬頻的用戶*，非網上行寬頻用戶須聯絡第三者服務供應商申請相關服務。)

步驟1


登入<http://setup.hktsmartliving.com>

步驟2

使用默認的個人域名，或輸入用戶所需的個人域名


步驟3

按“註冊”

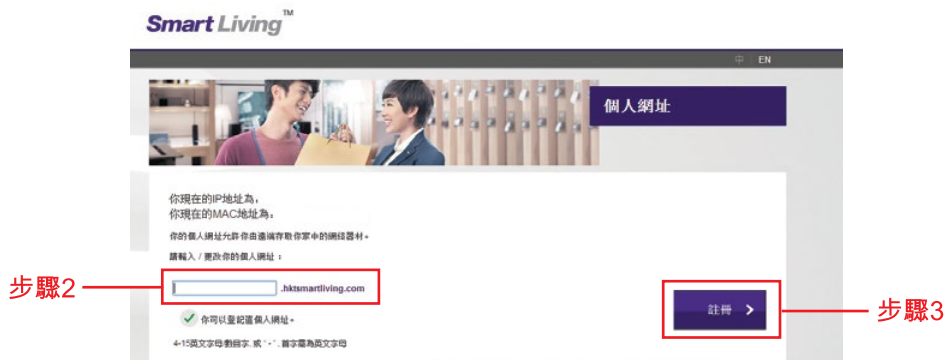


步驟4

在彈出的對話框選擇“確定”

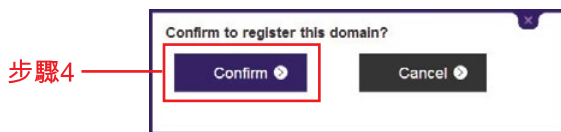

步驟5

按“完成”

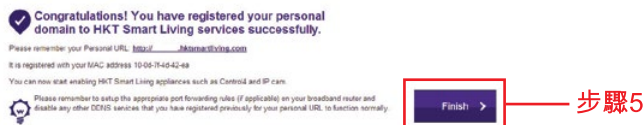

*由HKT提供之室外控制服務，首年費用會被豁免；其後之年費，HKT會以當時價格收取費用。詳情請致電熱線：1000。

Outline

Schneider Wiser2 App

New device installation and settings	P.26
iOS device	P.26
Android device	P.31
User interface	P.36
Change the Wiser2 user profile and password	P.44
Setting of DDNS	P.47

Wiser2 – new device installation and settings

In order to access the Wiser2, user must download the app to a mobile device and set up the connection. The app supports iOS and Android devices.

iOS

Download and install the app

User can search for “Wiser2” at the App Store or scan the QR code below and download the application.



iOS



QR code (iOS device)

Connect to the Wi-Fi network

After downloading and installation, connect your mobile device to the same SSID as Wiser2.



Login to Wiser2

User should follow the steps below to login to Wiser2.

Step 1

Start the app.

Step 2

Enter the Wiser2's IP address in the box below.

Default IP address: 192.168.1.201*

(*please do not attempt to change the IP address)



The image shows the login screen of the Wiser2 Home Control app. The interface has a green background. At the top right is a 'Help' button. Below the 'wiser2 HOME CONTROL' logo is a 'WAN URL' input field containing '192.168.1.201', which is highlighted with a red rectangle. Below this is a 'DemoFlat' input field, followed by a field with seven dots for a password. At the bottom is a 'Connect' button.


Step 3

Enter the user name and password in the boxes below.

Default username: [refer to Notification of HKT Smart Living password](#)

Default password: [refer to Notification of HKT Smart Living password](#)

(*applies only to user info that has not been changed)

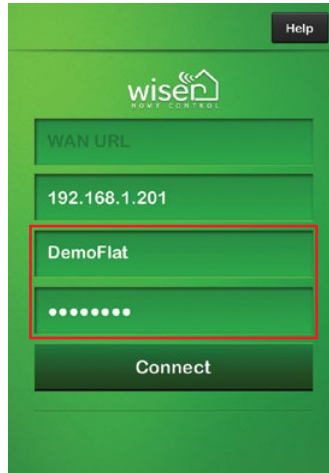The image shows a mobile app interface for 'Wiser2 HOME CONTROL'. At the top right is a 'Help' button. The app logo is at the top center. Below it are four input fields: 'WAN URL' (containing '192.168.1.201'), 'DemoFlat' (highlighted with a red rectangle), a password field (containing seven dots), and a 'Connect' button at the bottom.

Step 4

Select "Connect" and login to the Wiser2 system.

Out-of - home control

User can set up out-of-home control by entering a link into the app.

Step 1

Go to the app login page.

(if you are using the app, please select "Logout" to return to this page)

Step 2

Enter the DDNS in the “WAN URL” box.

(user can find the DDNS information through the “setting of DDNS” in user guide)



The image shows a mobile application interface for 'wiser2'. At the top right is a 'Help' button. The 'wiser2' logo is centered at the top. Below the logo is a 'WAN URL' input field, which is highlighted with a red rectangular border. Underneath this field are three more input fields: the first contains the IP address '192.168.1.201', the second contains the text 'DemoFlat', and the third contains seven dots representing a password. At the bottom of the form is a large 'Connect' button.

Step 3

Enter the user name and password.

Default username: [refer to Notification of HKT Smart Living password](#)

Default password: [refer to Notification of HKT Smart Living password](#)

(*applies only to user info that has not been changed)


Step 4

Press “Connect” and login to the Wiser2.

Android

Download and install the app

User can search for “Wiser2” by name at the Google Play Store, or scan the QR code below and download the application.

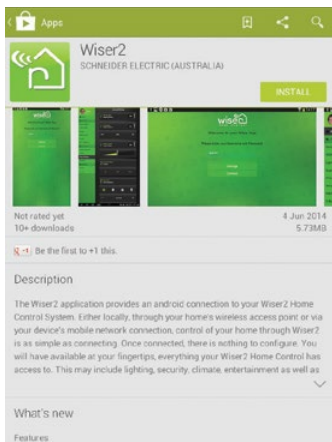


Play Store



QR code (Android device)

Connect to the Wi-Fi network

After downloading and installation, please connect your mobile device to the same SSID as Wiser2.

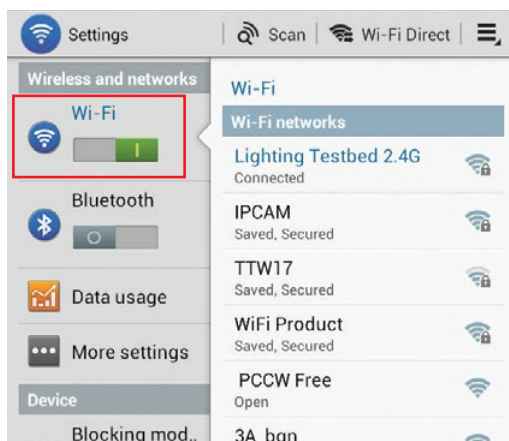

Login to Wiser2


User should follow steps below to login to Wiser2.

Step 1

Start the app.

Step 2

Press "Setting".

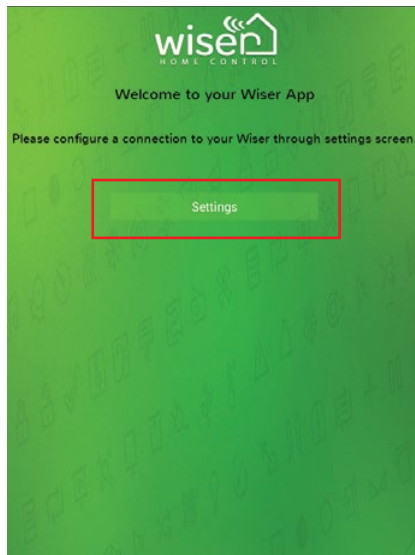


Step 3

Enter Wiser2's IP address in the box below.

Default IP address: [192.168.1.201](#)*

(*please do not attempt to change the IP address)

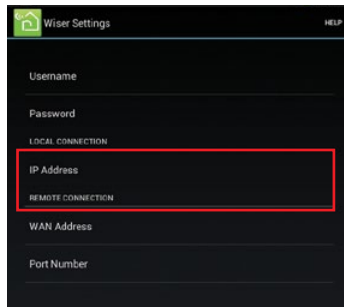A screenshot of the 'Wiser Settings' application interface. The title bar at the top shows a green house icon, the text 'Wiser Settings', and a 'HELP' button. Below the title bar, there are input fields for 'Username' and 'Password'. Under the heading 'LOCAL CONNECTION', the 'IP Address' field is highlighted with a red rectangular box. Below this, there is a section for 'REMOTE CONNECTION' which is currently collapsed, followed by 'WAN Address' and 'Port Number' fields.


Step 4

Enter the username and password in the boxes below..

Default username: [refer to Notification of HKT Smart Living password](#)

Default password: [refer to Notification of HKT Smart Living password](#)

(*applies only to user info that has not been changed)

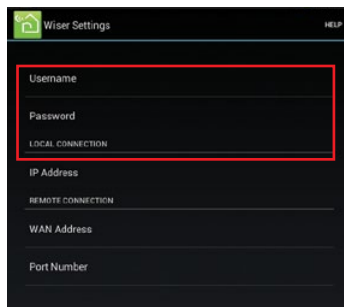A screenshot of the 'Wiser Settings' application interface, similar to the one in Step 3. In this screenshot, a red rectangular box highlights the 'Username' and 'Password' input fields. The 'LOCAL CONNECTION' section is visible below, with 'IP Address' as the first field. The 'REMOTE CONNECTION' section is collapsed, and 'WAN Address' and 'Port Number' fields are at the bottom.

Step 5

Press  on your Android device and login to Wiser2.

Out-of- home control

User can setup out-of-home control by entering a link into the app.

Step 1

Go to the app's login page.

(if you are using the app, please select “Logout” to return to this page)

Step 2


Press “Settings”.



Step 3

Select the “WAN Address” box. Enter the DDNS in the “WAN Address” box.

(user can find the DDNS information through the “setting of DDNS” in user guide)

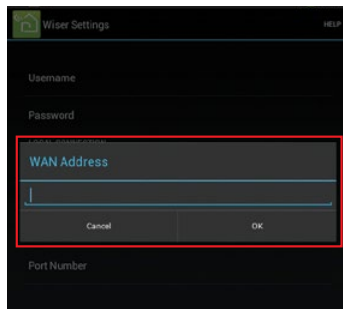

Step 4

Enter the username and password.

Default username: [refer to Notification of HKT Smart Living password](#)

Default password: [refer to Notification of HKT Smart Living password](#)

(*applies only to user info that has not been changed)


Step 5

Press  on your Android device and login to Wiser2.

User interface

Homepage

Homepage includes control of different electronic devices:

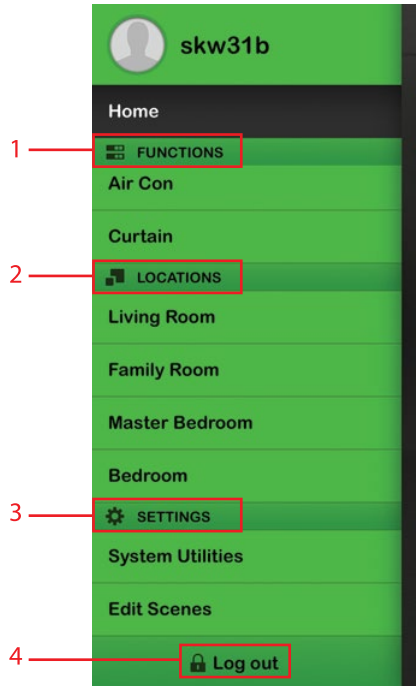

1. FUNCTIONS

User can select different scene settings and individually control lighting, curtains and air-con.

Lighting

Step 1


Select “Lighting” in the “Functions” category.

Step 2

For on/off switch, user can control lights with the right-hand side button.

For dimmer switch, user can switch lights on/off with the right-hand side button.

In addition, user can dim lights up/down with the “+”/“-” button at the bottom.

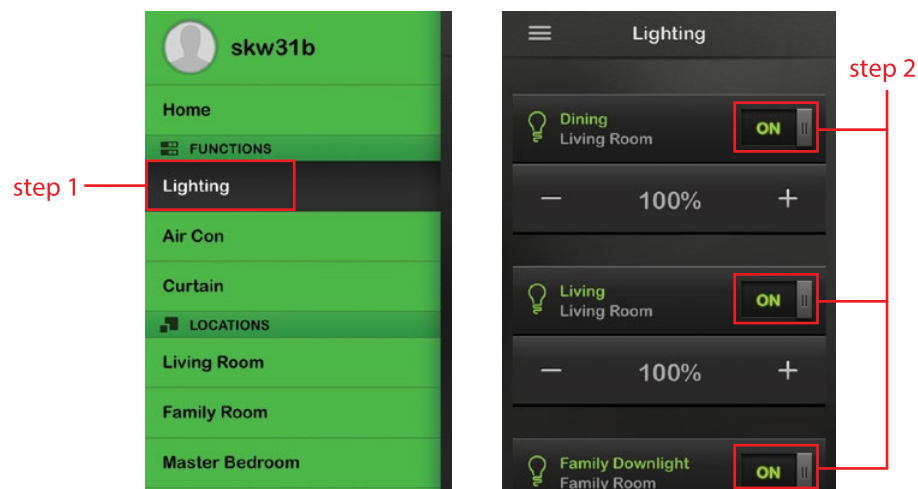


Air Con

Step 1

Select “Air-Con” in the “Functions” category.

Step 2

User can turn on the air-con by clicking the “ON” button.

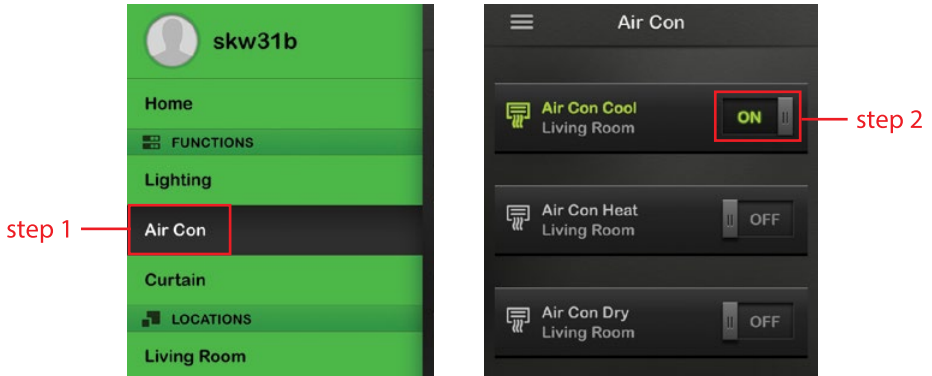


Curtain

Step 1

Select “Curtains” in the “Functions” category.

Step 2

User can control the curtains with the **Open** , **Close** and **Stop** buttons.

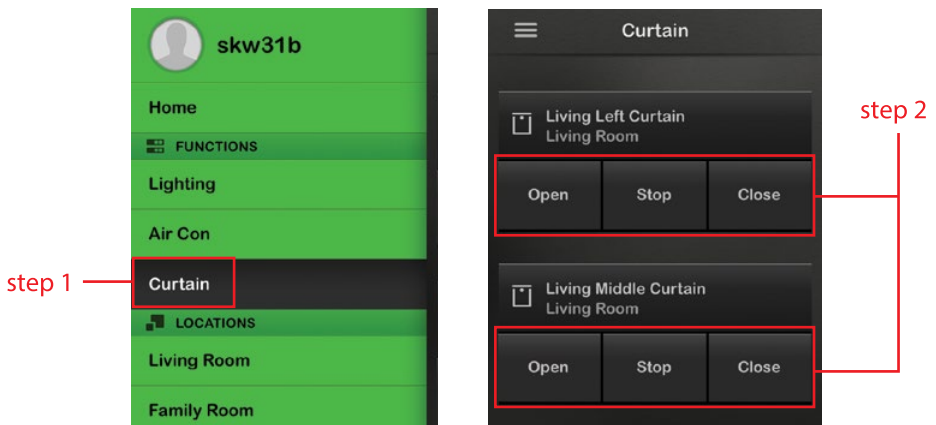

2. LOCATIONS

User can control devices in different zones or locations – e.g. living room, dining room, master room, bedroom and kitchen.

Devices are arranged according to physical location.

Location name can be changed according to user preference, such as, “Master Bedroom”, “Balcony” and “Dining room”.


Example: If user needs to switch off the master bedroom lighting, simply select “Master Bedroom” and select the relevant lights.

Step 1

Select the location to control – e.g. “Living Room” in the “Locations” category.

Step 2

All the connected devices in the “Living Room” location will appear on the right-hand panel (as shown in below picture). User can control the connected devices at will.

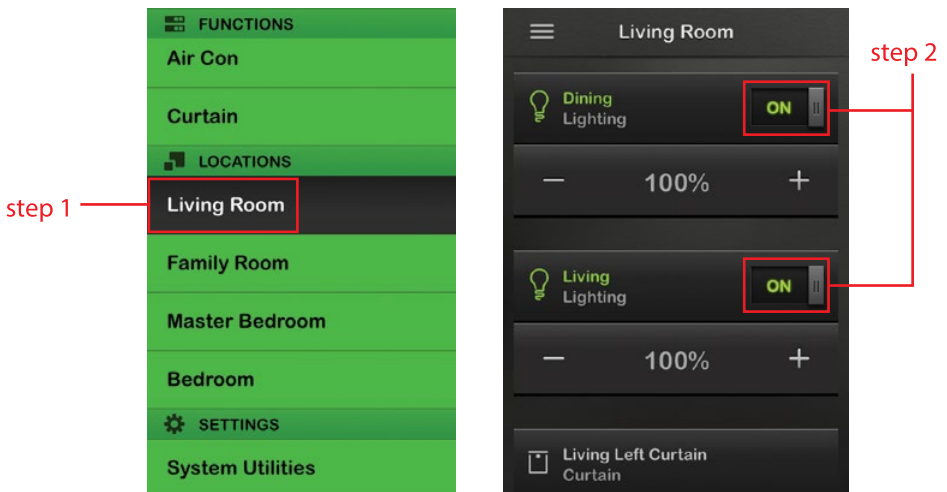

3. SETTINGS

User can change predetermined scene settings – e.g.lighting brightness, curtains on/off and air-con on/off.


Edit scene

User can edit a preset scene with Wiser2. Preset device parameters can be changed, but not added or removed.

For example: 1 set of curtains and 3 sets of dimmable light presets make up the “Romantic” scene. User can change the open/close curtain settings and brightness of the 3 sets of lights when the scene is triggered, but user cannot remove or add curtains/lights in respect of the “Romantic” scene.


Step 1

Select “Edit Scenes” in the “Settings” category.

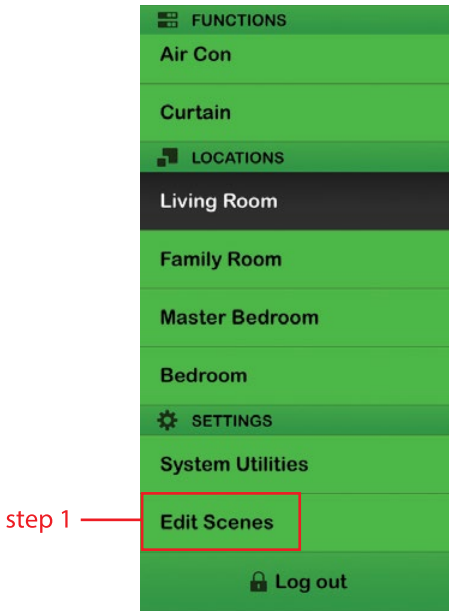


Step 2

Select “Edit” to change scene parameters.

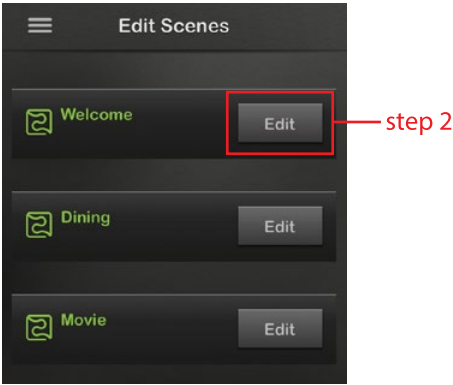

Step 3

User can find 4 parameters for each device on the scene editing page.

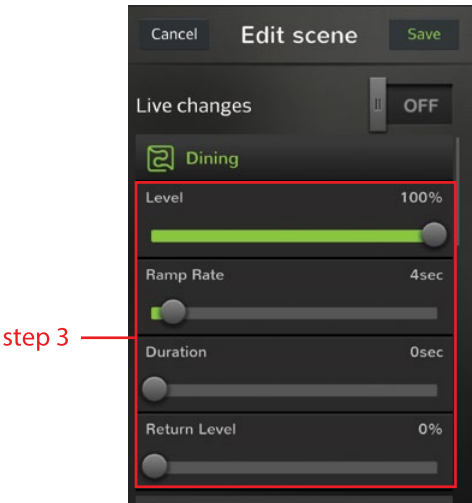

Level:

This is light brightness.

For control of dimmable lighting, 0% represents off and 100% represents the brightest.

For control of non-dimmable lighting, 0% represents off and 100% represents on.

Ramp rate:

This is the time range required for a light to dim to a predetermined level.

Duration:

This is the time required to control a light after a scene is triggered.

For example: Level set at 100%, ramp rate in 1 minute and duration of 30 seconds.
30 seconds after the scene is triggered, it will take 1 minute for the light to dim 100%.

Step 4


Press "Save" to change and store the settings.

4. Log out

User can logout of Wiser2 and break the connection between the mobile device and Wiser2.

Step 1

Select “Logout” at the bottom.

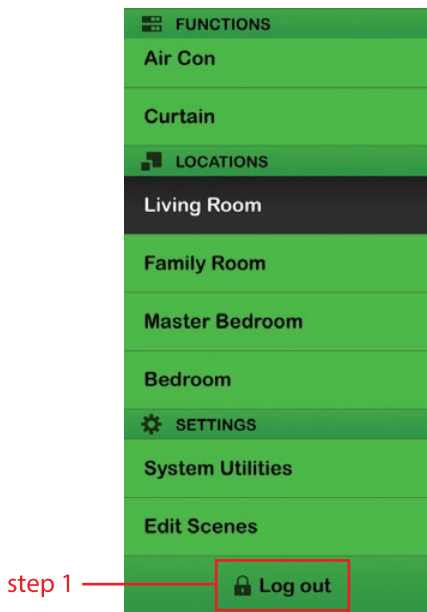

Step 2

Select “OK” to confirm you want to logout of the Wiser2.

Change Wiser2 user profile & password

User can login to Wiser2 and change profile and password info via a web browser.

To login to Wiser2 via a web browser, devices displaying the web browser MUST be connected to the same Wi-Fi source used by Wiser2.

Step 1

Open a browser and enter Wiser2's IP address

Default IP address: [192.168.1.201](#)*

(*please do not attempt to change the IP address)

Step 2

Login to Wiser2

Default username: [refer to Notification of HKT Smart Living password](#)


Password: [refer to Notification of HKT Smart Living password](#)

(*applies only to user info that has not been changed)




Step 3

Select “Profiles” in the “Settings” category.

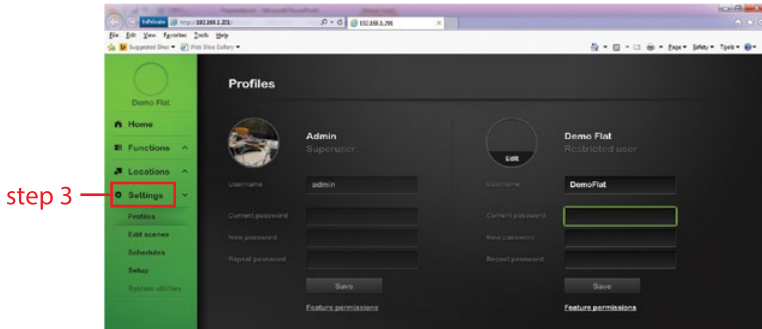

Step 4

User can edit the profile page by selecting “Edit” on the icon.

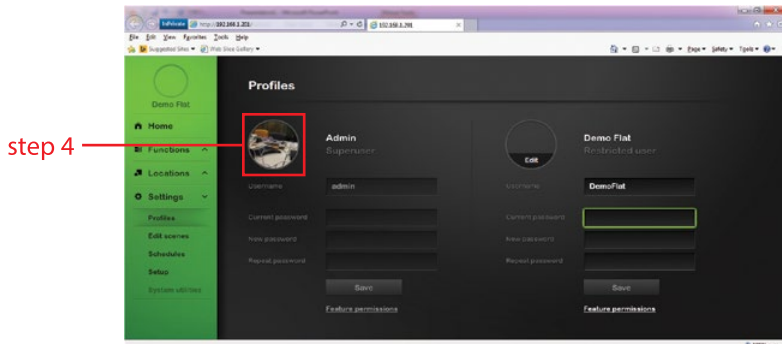


Step 5

User can change the password to login to Wiser2 system.

Current password: Enter the existing password.


New password: Enter the new password.

Repeat password: Enter the new password again to ensure no mistake has happened.

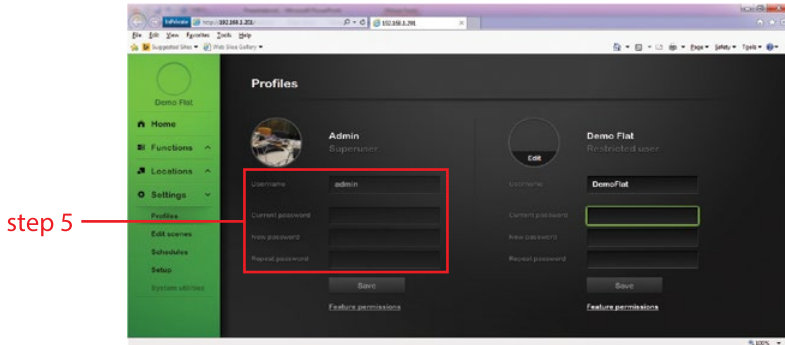

Step 6

Select "Save" to complete the profile edit.

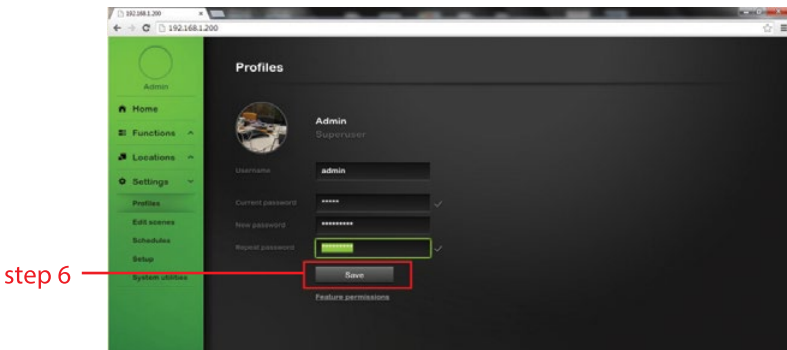

Setting of DDNS

User should follow below steps to register personal domain.

(applies only to registered NETVIGATOR subscribers*, non-NETVIGATOR customer should contact corresponding service provider for subscribing the service.)

Step 1


Go to <http://setup.hktmartliving.com>

Step 2

Use the default personal domain or enter the desired personal sub-domain.


Step 3

Press “Register” to register for the personal domain.

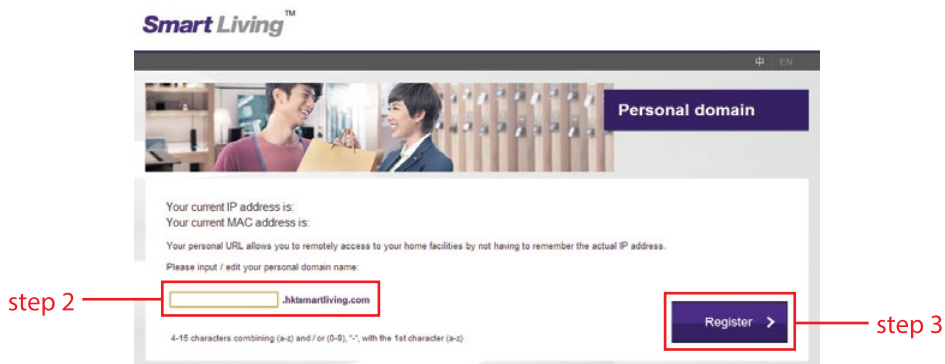


Step 4

Select “Confirm” in the pop-up box to proceed with registration.

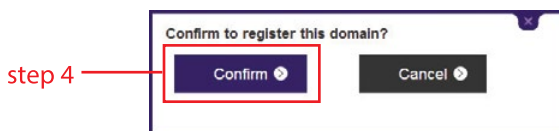

Step 5

Press “Finish”.

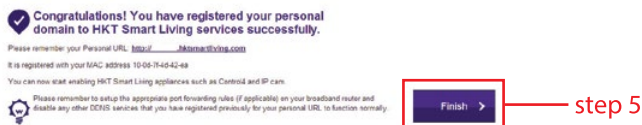

* If the Out-of-Home Control Service has been opted for and such service is provided by HKT, the first year of the service fees therefore will be waived, and subsequent service fees thereafter will be charged at HKT's then prevailing rate. Please call our hotline 1000 for details.